


**Gary Metall-Terassenschrank 1/  
Gary Metal Terrace Cabinet 1**

Art.-Nr: 7010012

**weka**

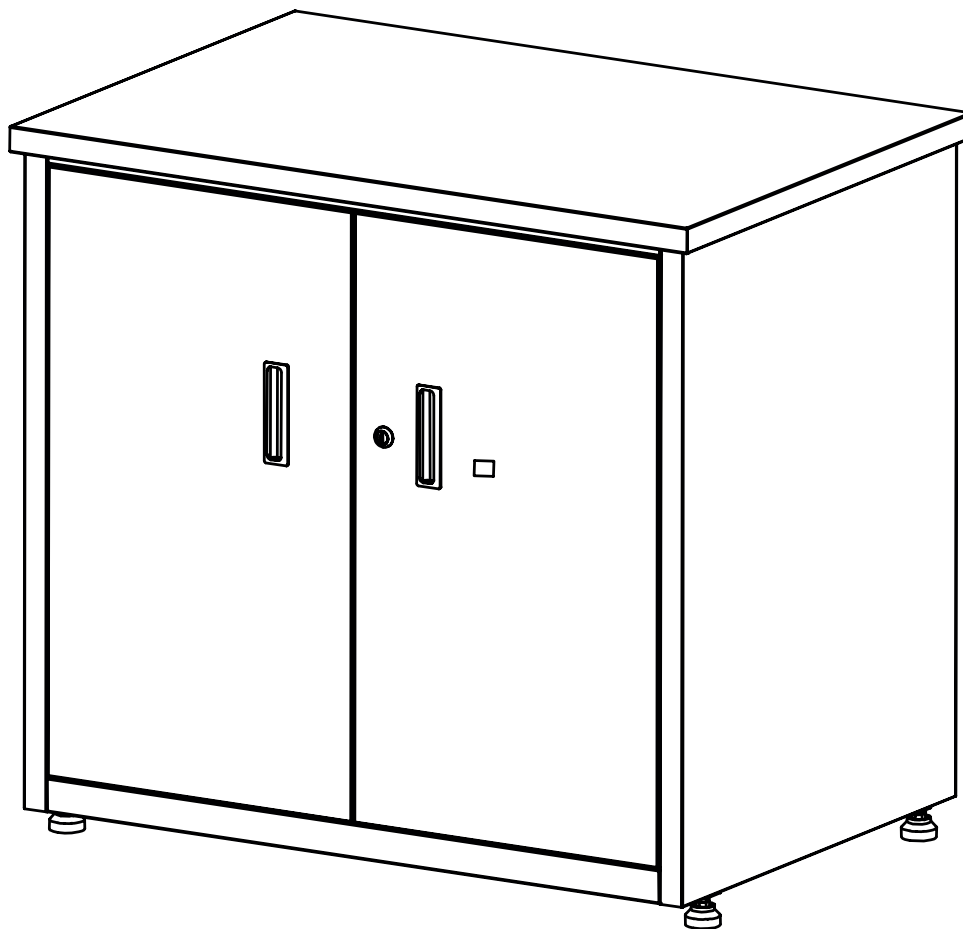


**Montageanleitung/  
Assembly instructions**


[www.weka-holzbau.com](http://www.weka-holzbau.com)

weka Holzbau GmbH  
Postfach 20 02 04  
D-17013 Neubrandenburg


Sie erreichen uns/ You can reach us:  
Mo - Fr 08:30 - 16:30 Uhr  
+49 (0)395/42908-0

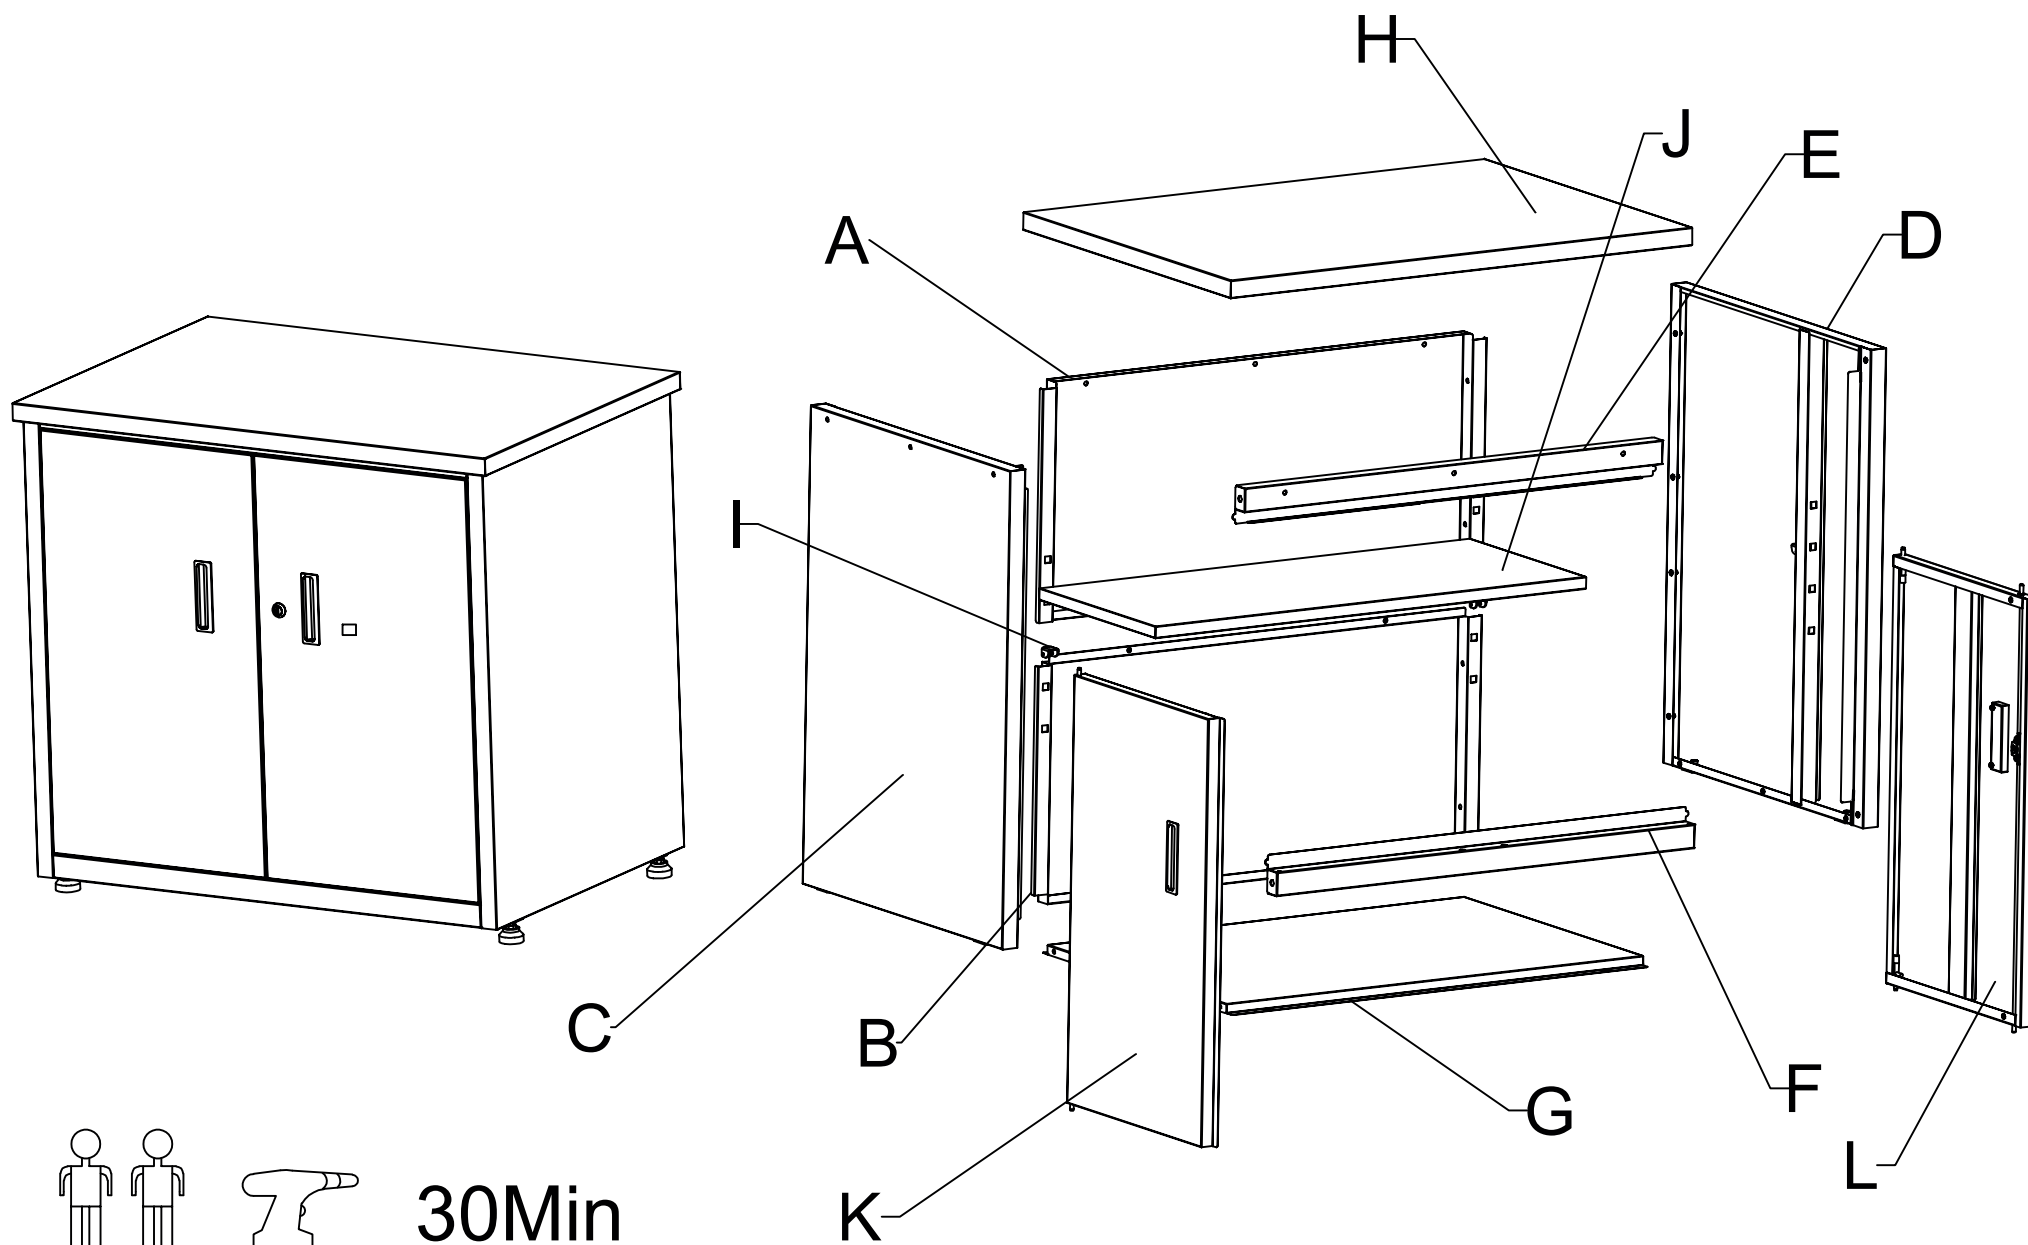


Ax1

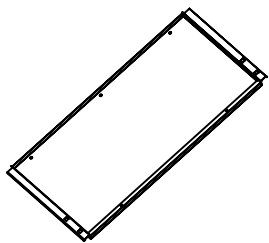


Bx1

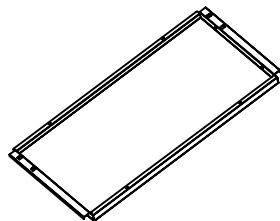


Cx1

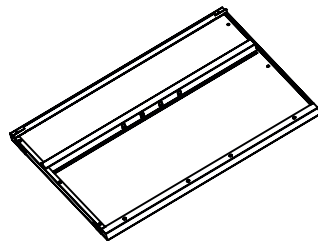


Dx1

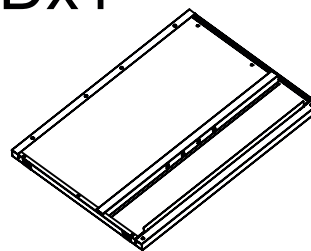


Ex1

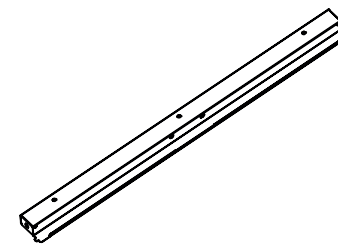


Fx1

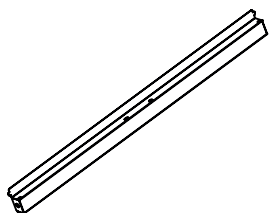


Gx1

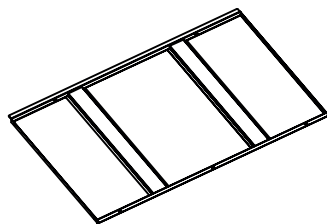


Hx1




Ix4

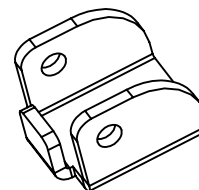


Jx1

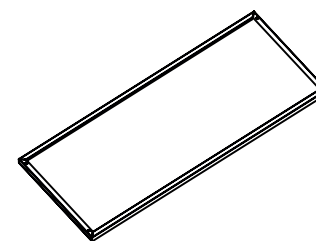


Kx1

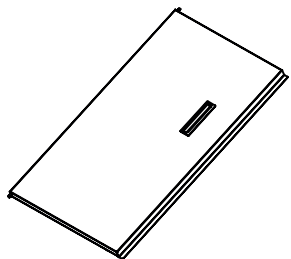

Lx1

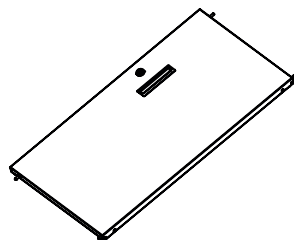


Mx37

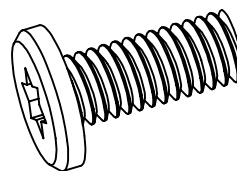


M4x10


Nx37

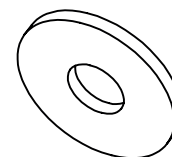


Ox4

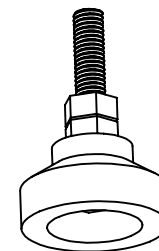


Px2

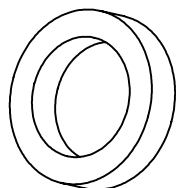

Qx4

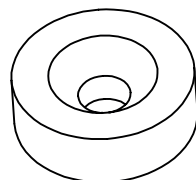


Rx4

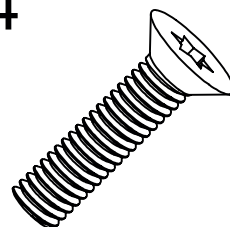


M4x14


Sx4

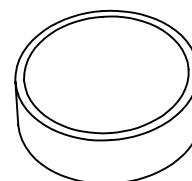

Tx1

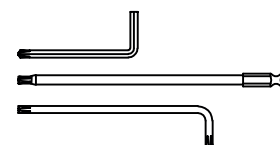

# STEP1

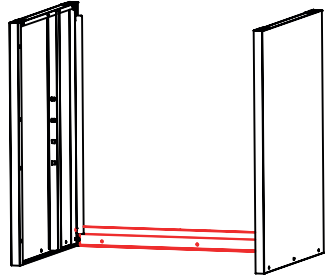


Cx1

Dx1





Ex1

Mx2

Nx2

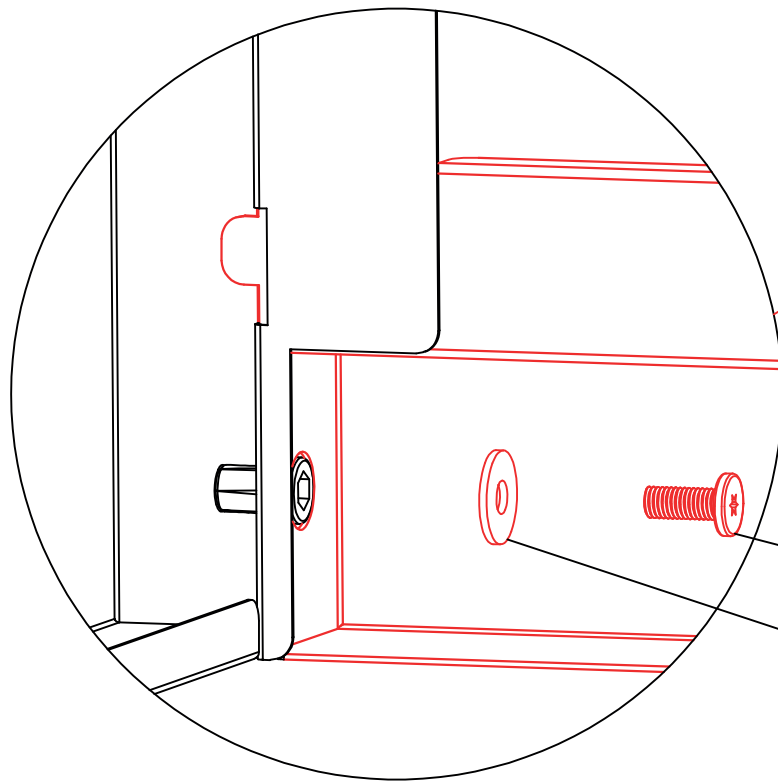


## STEP2

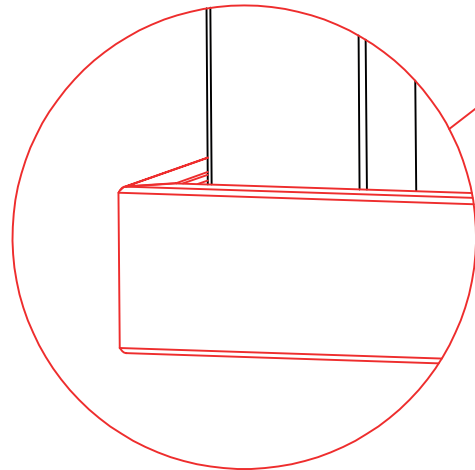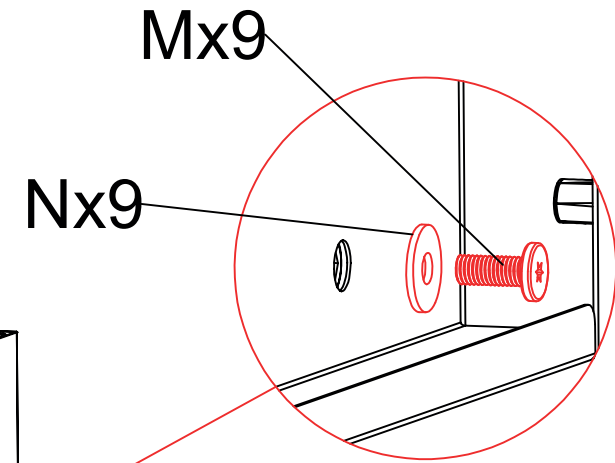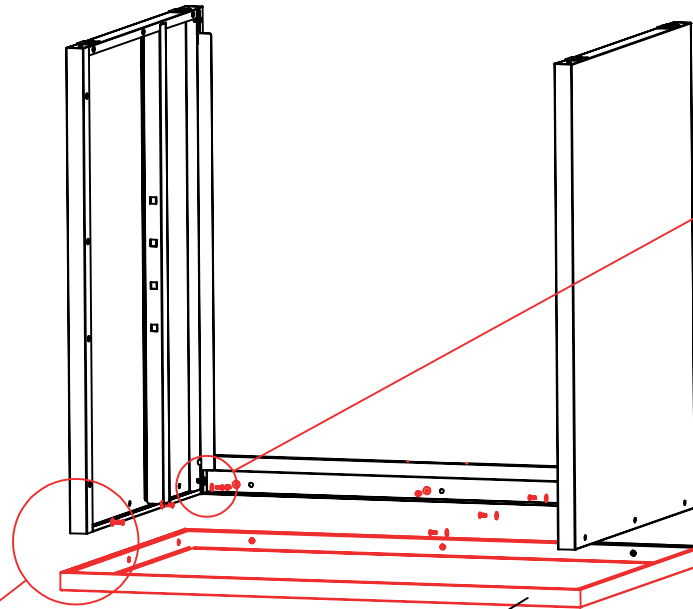
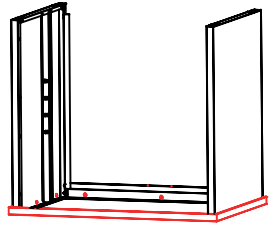


Hx1

# STEP3

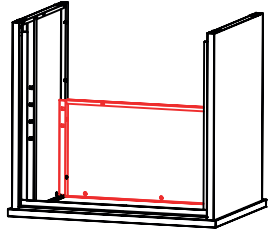




Ax1

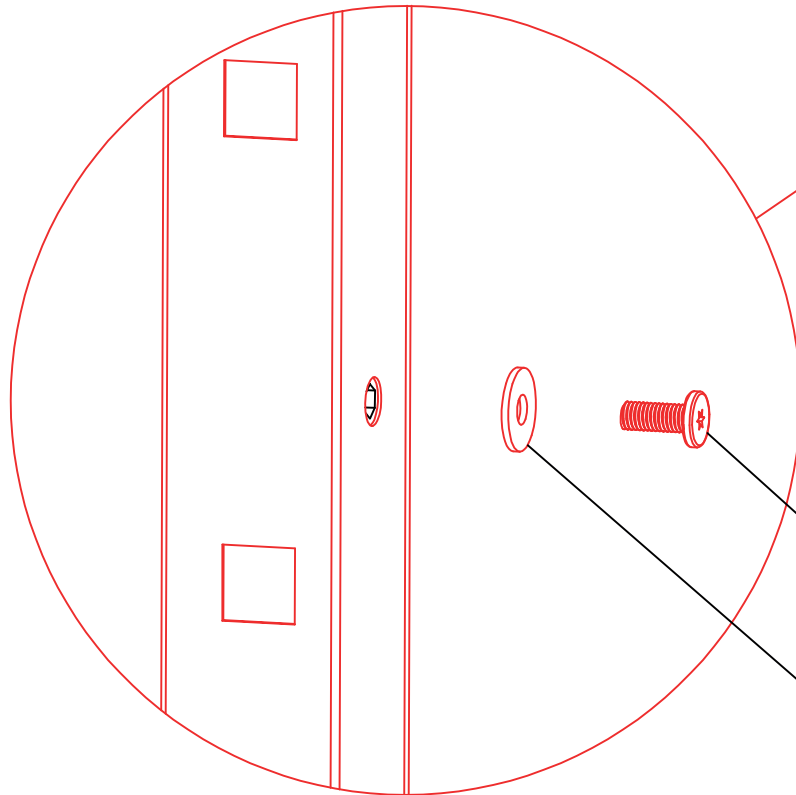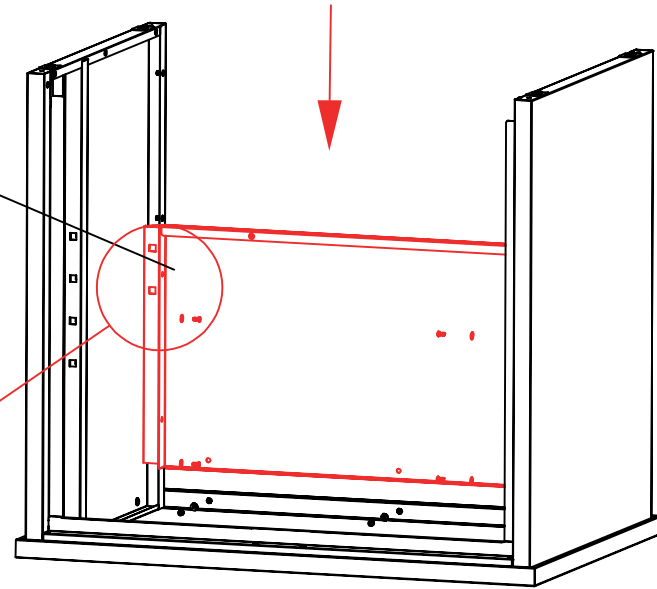




Mx7

Nx7

## STEP4

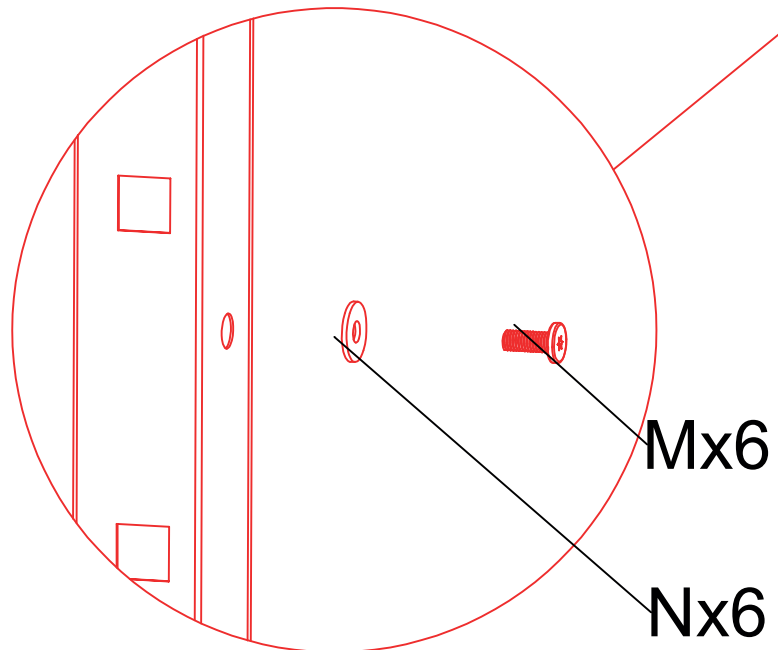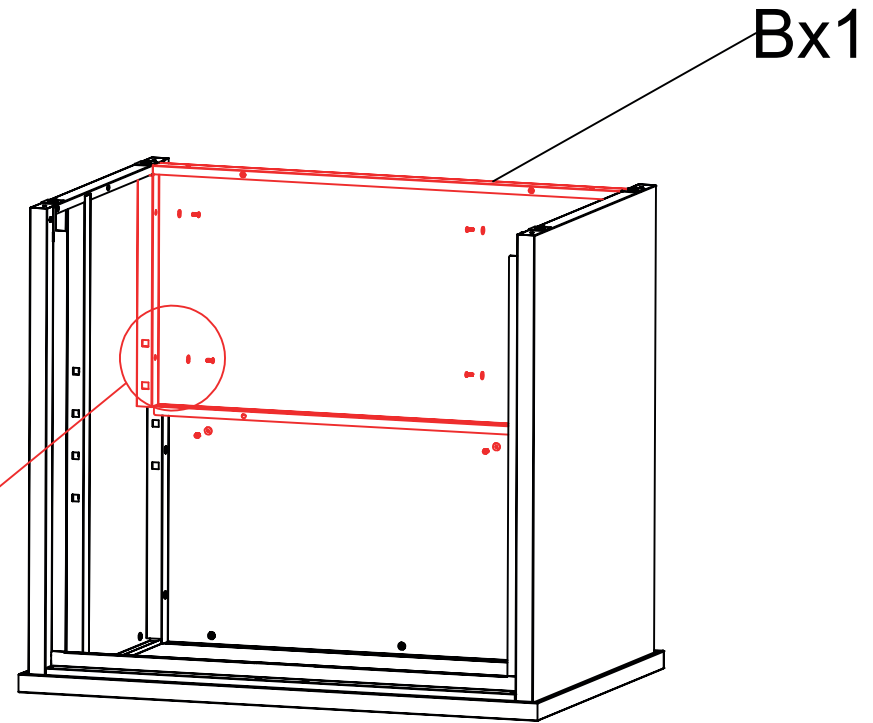
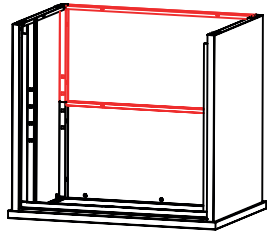


## STEP5

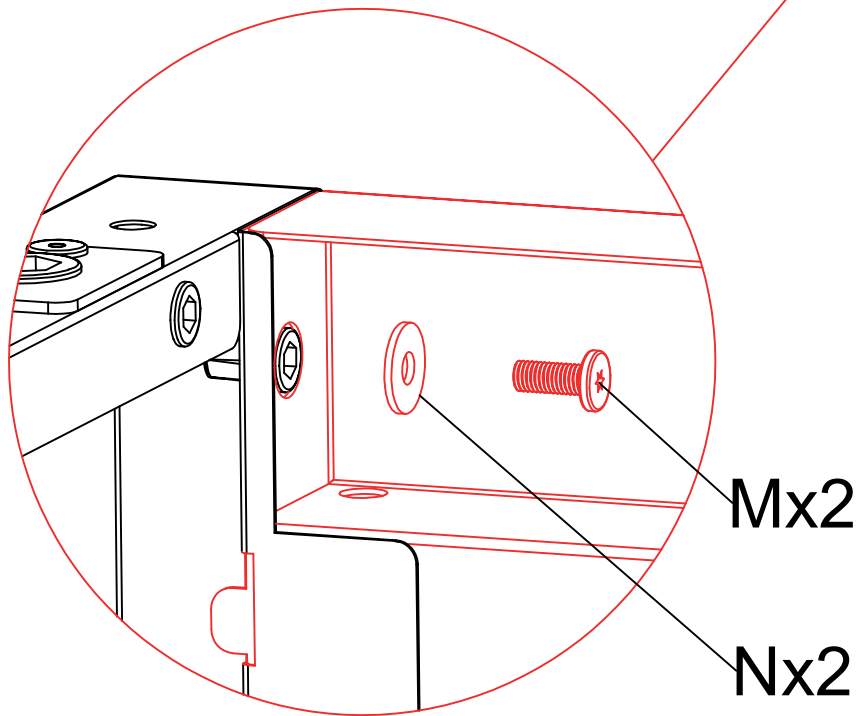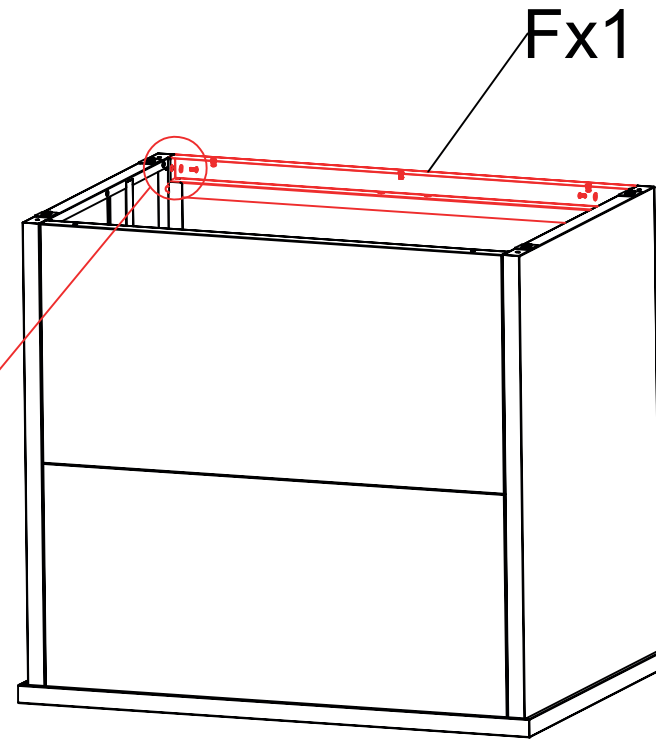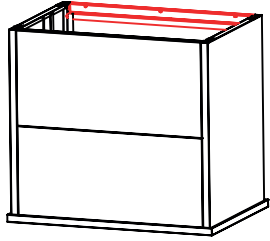




## STEP6

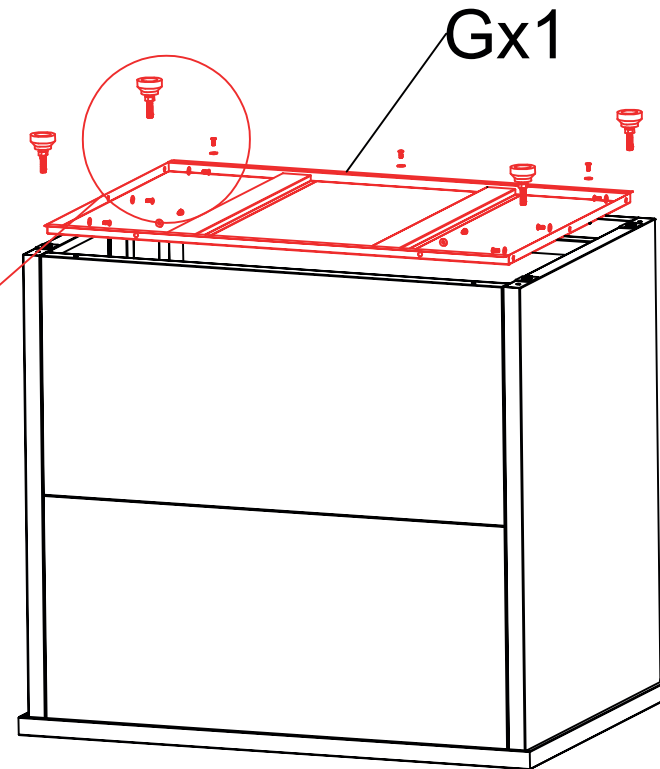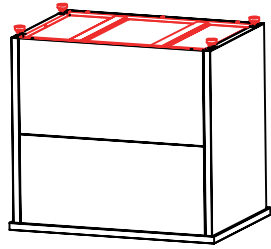



Ox4

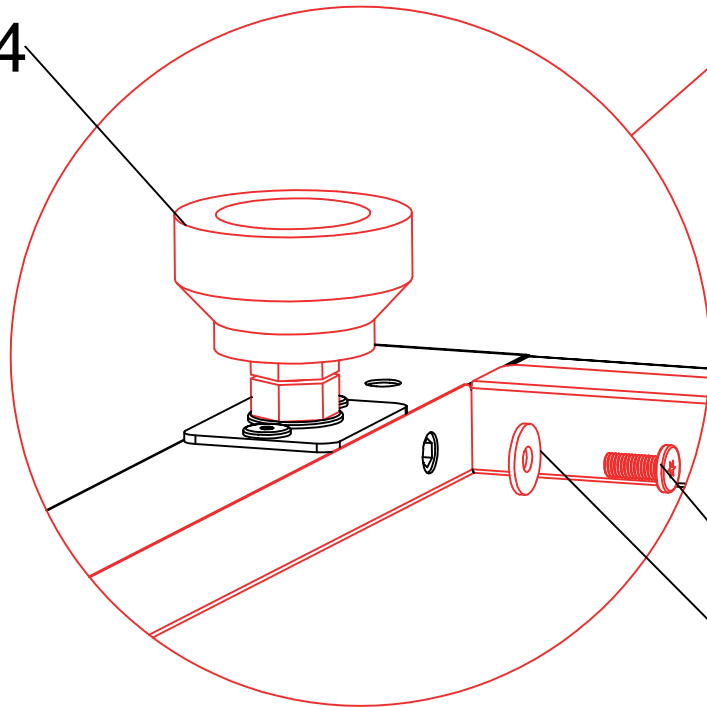

Mx11



Nx11

## STEP7-1

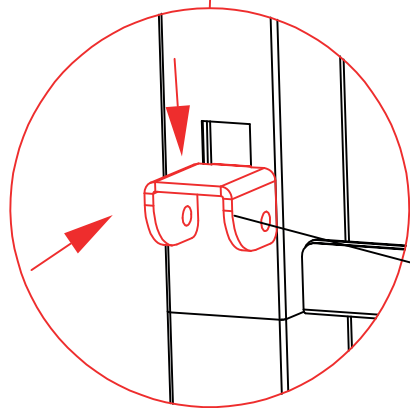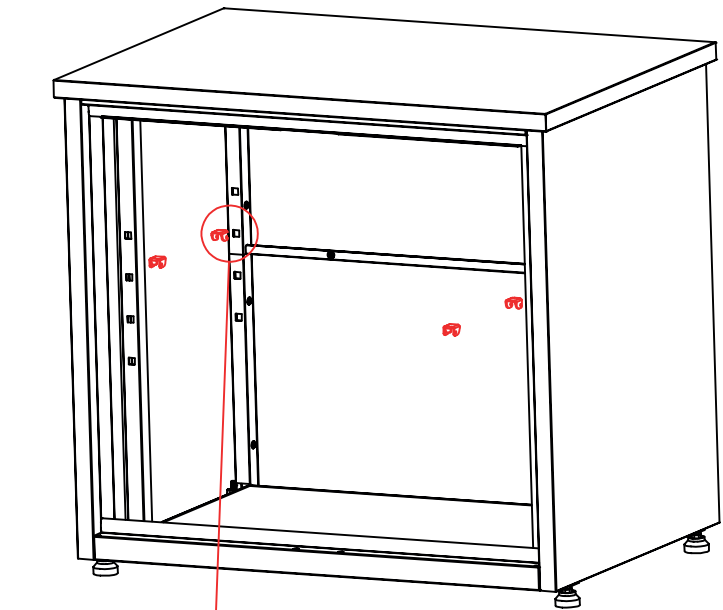

1x4

## STEP7-2

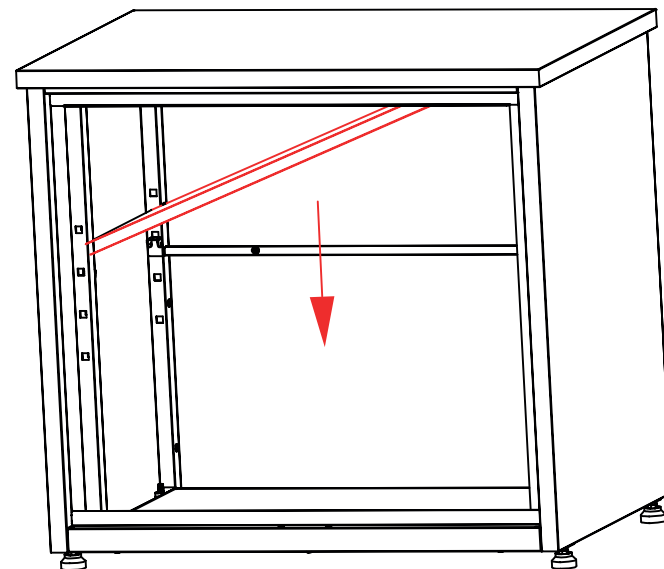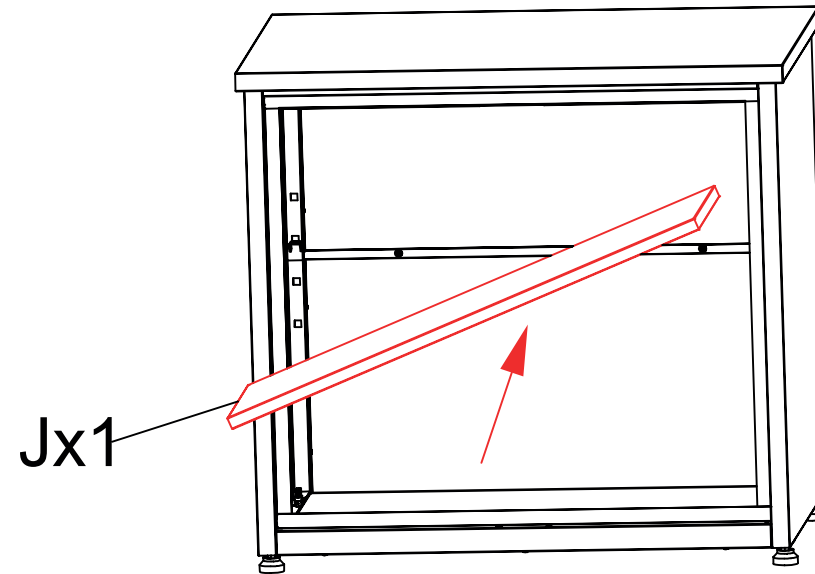

## STEP8

